TROUBLE SHOOTING

If the unit doesn't operate…	Check that the batteries are installed correctly. or Install new batteries.
If the volume is too low…	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed…	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate…	Install new batteries.
If the lights on the screen become dim…	Install new batteries.
If the unit malfunctions…	Install new batteries.

IMPORTANT INFORMATION

Care instructions

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

This product complies with the ASTM F963

STATEMENT of FCC COMPLIANCE

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

FCC LABEL COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2012 CIDE Group

Kidz Delight Ltd
3550 Hobson Road, Suite 404
Woodridge, IL 60517
U.S.A.

Customer service: (800) 777-8670
Toll-free number for the USA and Canada only
www.kdplanet.com
All rights reserved.
© 2012 Cide group

Tech Too and Tech Too logo are registered trademarks of CIDE.

Kidz Delight and Kidz Delight logo are registered trademarks of CIDE.

V00
June 2013
Printed in China
Made in China

WASTE ELECTRICAL PRODUCTS AND BATTERIES SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE

2+

Tech-Too

Smart TV

INSTRUCTION MANUAL

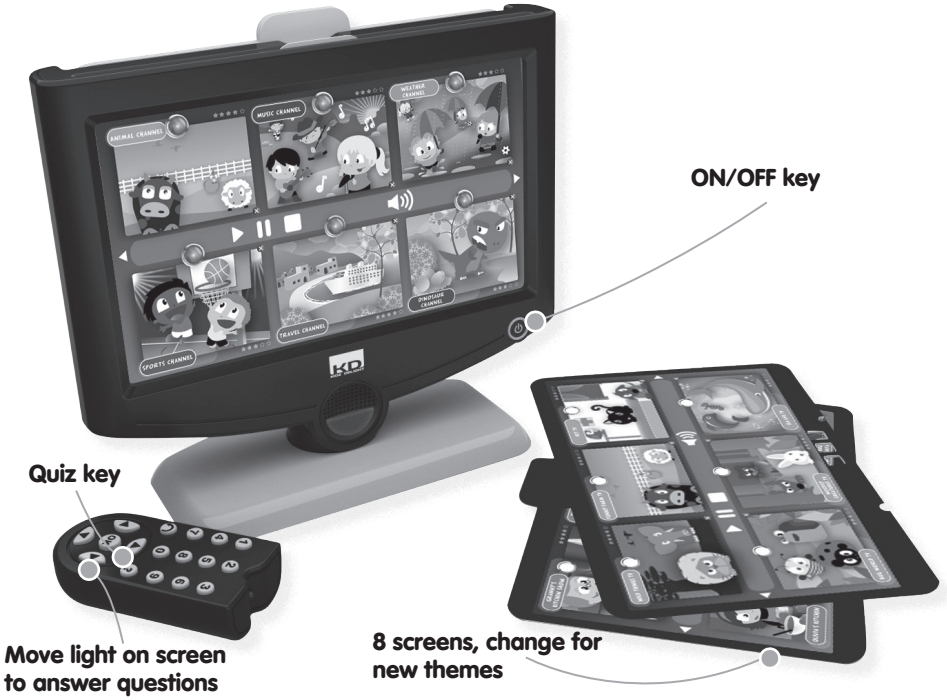

Important Information

- This toy is suitable for children aged 2 years & over.
- Please retain this manual for further reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- IMPORTANT: for additional safety, check toys regularly for signs of damage during use.

Contents

- Instruction manual
- Unit
- Remote control
- 8 cards

K13150

How to play

There are 8 cards that refer to 8 themed channels:

Animal channel

Cooking channel

Music channel

Weather channel

Sports channel

Travel channel

Cartoon channel

Dinosaur channel

To turn the unit on, press on the ON/OFF key in front of the unit, or insert a card.
If a card is already inserted, by pressing the ON/OFF key, the unit will play corresponding speech.
If no card is inserted, press the ON/OFF key and you will trigger by default the speech of the "try me" sticker.

On each card there are 6 programs available to select so you can hear the corresponding speech. Move the light on the screen by touching arrows on the remote and pressing OK to select a program. You will hear some funny sound effects and speech that specify the selected program. Press again and learn more about sports, colors, animals, dinosaurs, position in space, quantities, music and so on.

When pressing on the numbers of your remote, you will hear the corresponding numbers; let's learn numbers!

Quiz mode

Press the quiz key on your remote control and hear questions. To answer the questions, use the Remote Control keys. You will have three attempts.
Press the repeat key, at any time, to hear the question again.

How to change batteries

Unit

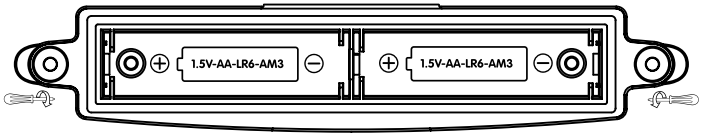

Remote Control

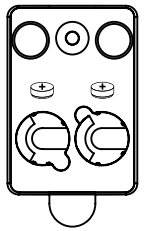

1. This Smart TV requires 3 x AA batteries and the remote control requires 3 x LR44.
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert AA into the Smart TV compartment and insert the LR44 into the Remote Control compartment and ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. For the AA batteries, should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. For the LR44 batteries, should the batteries have no polarity markings, the flat side of the battery should always be visible when batteries are in place.
7. Reassemble the battery cover and tighten the screw to secure.
8. Do not over tighten.

Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Keep small batteries out of the reach of young children
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
  - o Rechargeable batteries shall be charged only under the supervision of an adult.
  - o Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.